


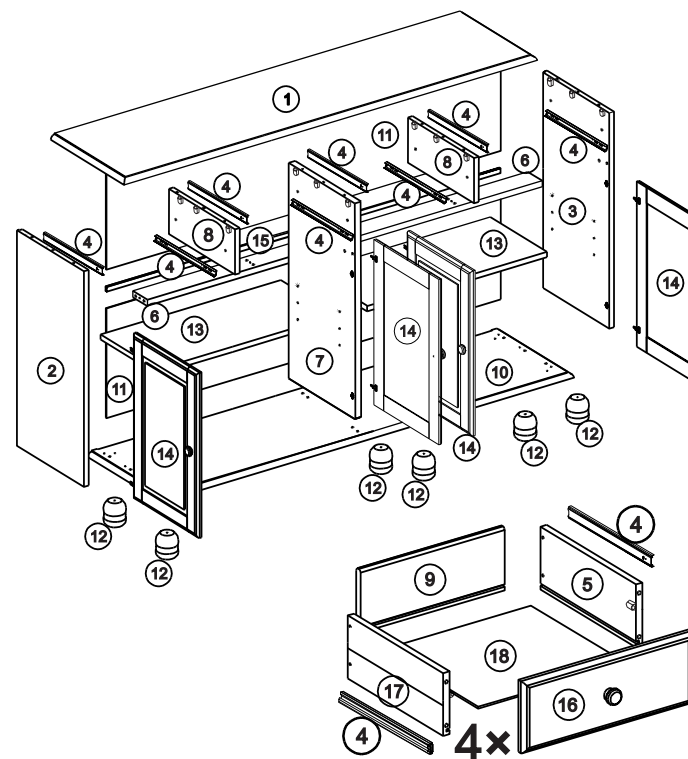


NÁVOD K MONTÁŽI

Příborník 4 dveře + 4 zásuvky RUBI 8929

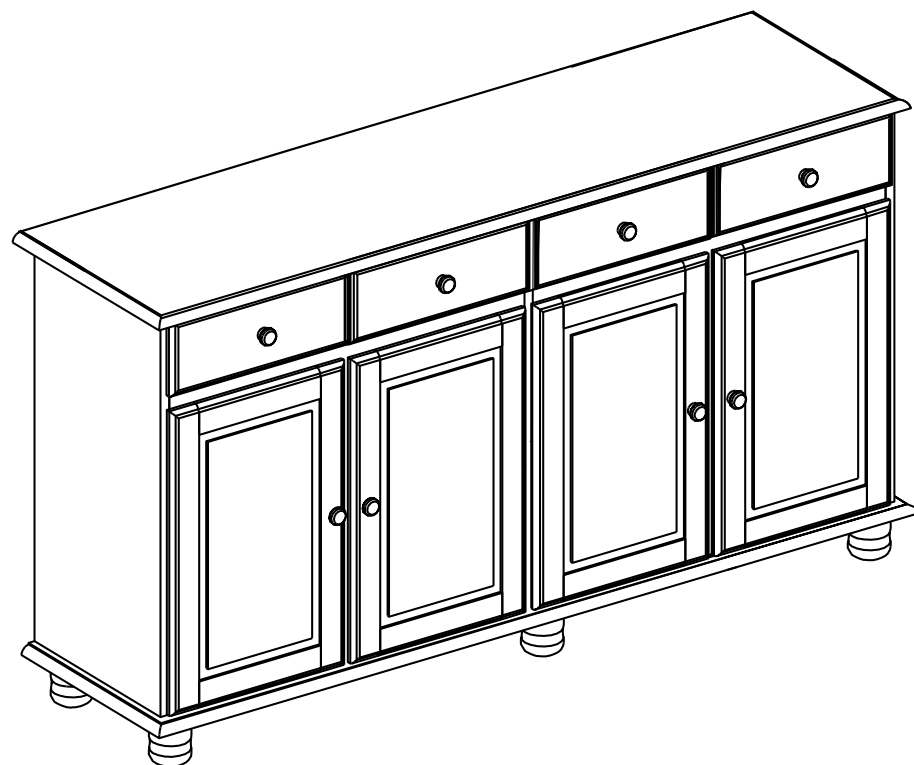

90 min











SEZNAM DÍLŮ

ks


01 - HORNÍ DESKA	01
02 - LEVÁ BOČNICE	01
03 - PRAVÁ BOČNICE	01
04 - ZÁSUVKOVÝ POJEZD	08
05 - PRAVÝ BOK ZÁSUVKY	04
06 - VODOROVNÁ PŘÍČKA	02
07 - SVISLÁ PŘÍČKA	01
08 - ZÁSUVKOVÁ PŘEPÁŽKA	02
09 - ZADNÍ DÍL ZÁSUVKY	04
10 - DNO	01
11 - ZÁDA	02
12 - NOHA	06
13 - POLICE	02
14 - DVEŘE	04
15 - SPOJKA ZAD	01
16 - ČELO ZÁSUVKY	04
17 - LEVÝ BOK ZÁSUVKY	04
18 - DNO ZÁSUVKY	04

V.:06

A  4,0 × 25 43×	B  4,0 × 40 11×	C  3,5 × 12 104×	D  27×	E  7,5 × 12 8×	F  8,0 × 25 52×	G  8×
H  M4 × 22 8×	I  8×	M  70 × 50 6×	N  10 × 10 30×			


01

Odpojte od sebe díly 1 a 2 zásuvkových pojezdů:

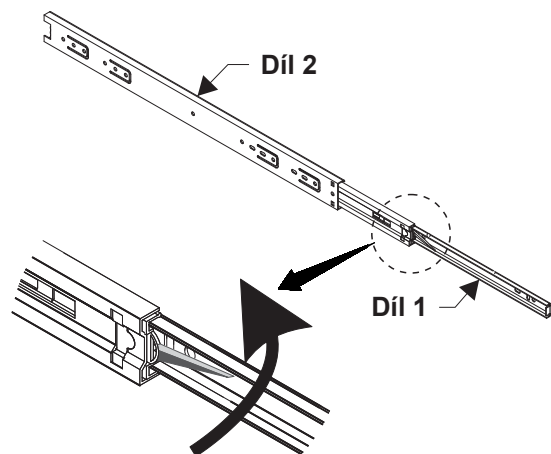


Vsuňte díl 1 do naznačené polohy, poté zvedněte uvolňovací páčku dílu 1 nahoru a oba díly pojezdu od sebe odpojte.


02

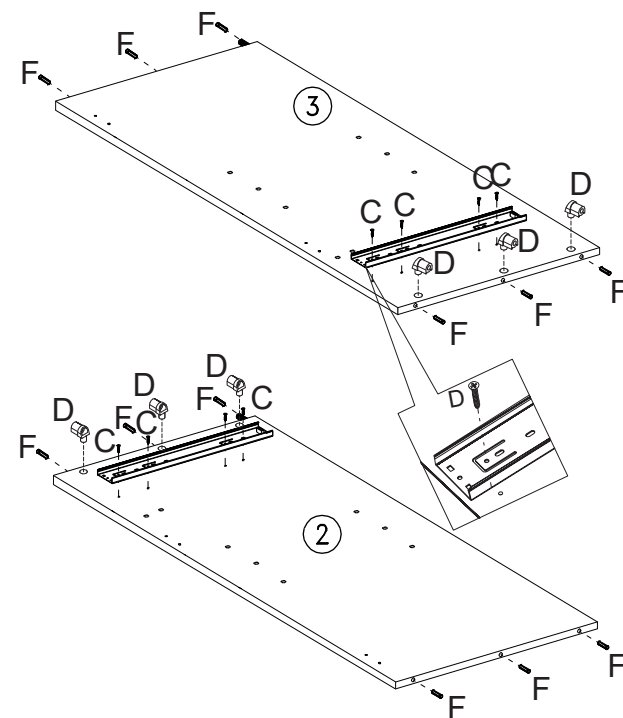


03

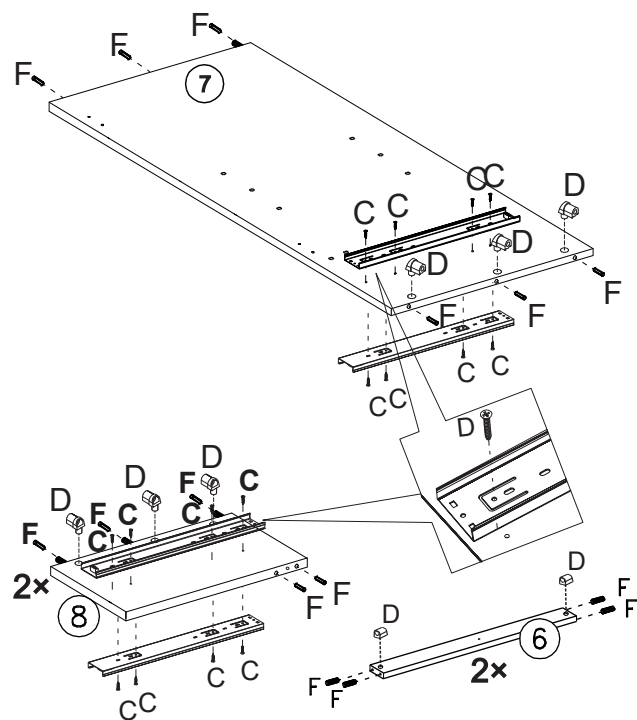


04

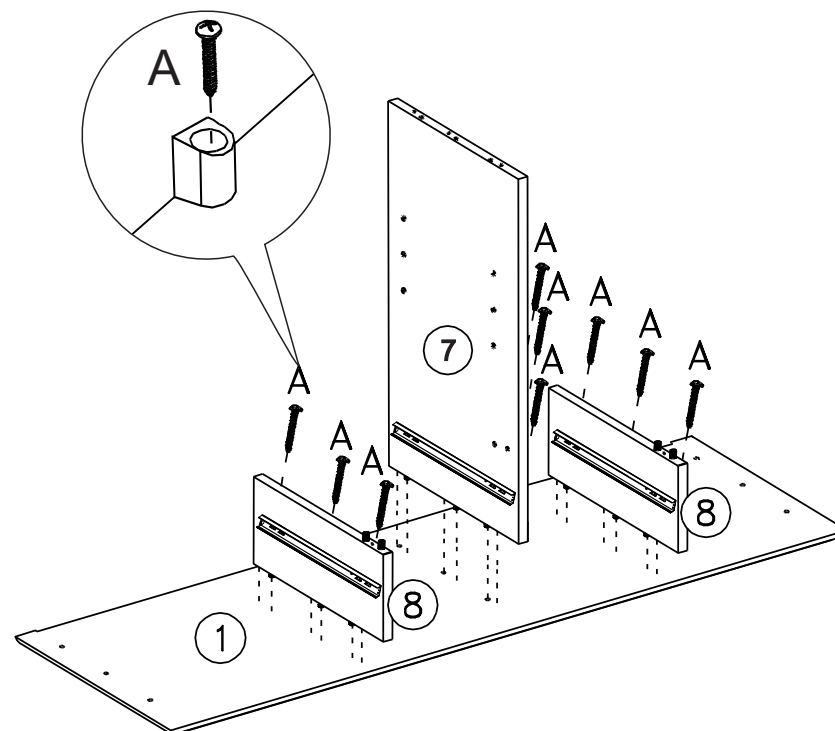


05

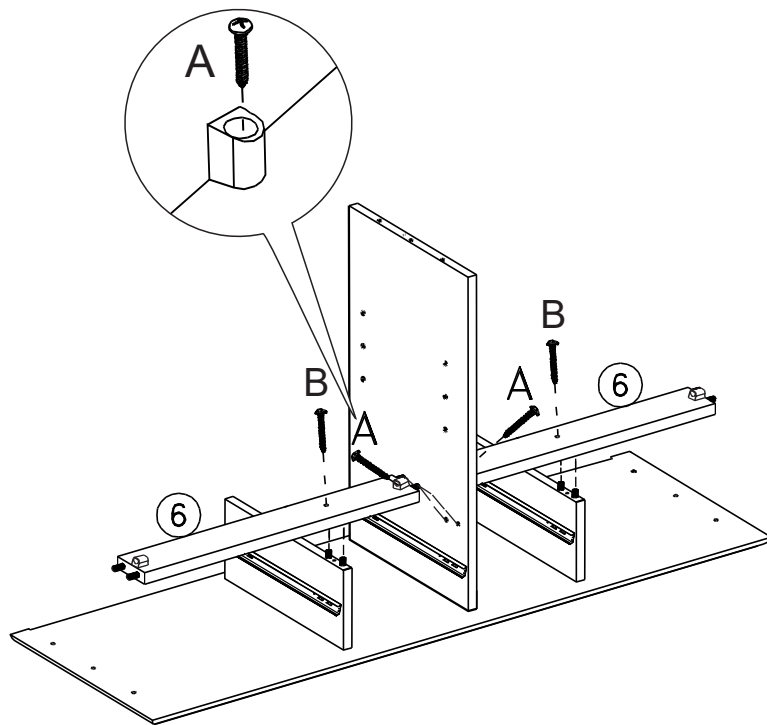


06

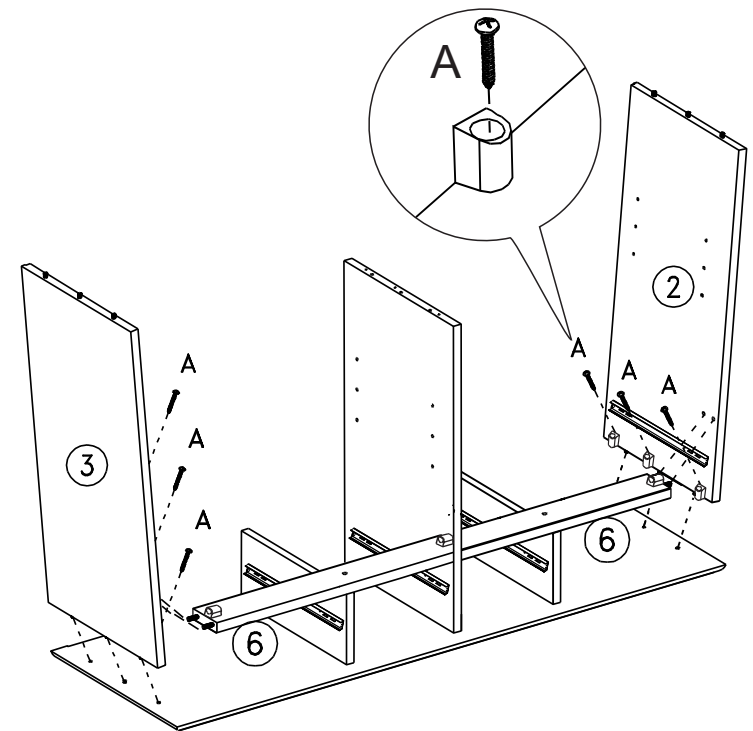


07

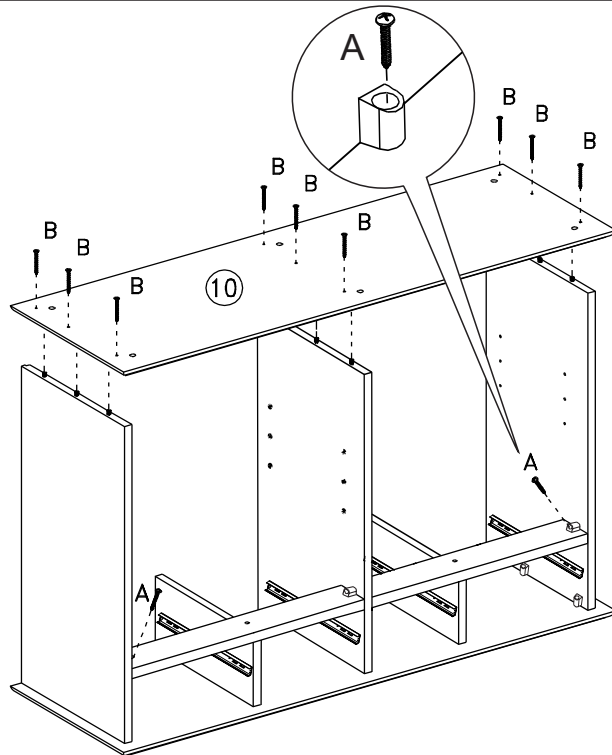


08

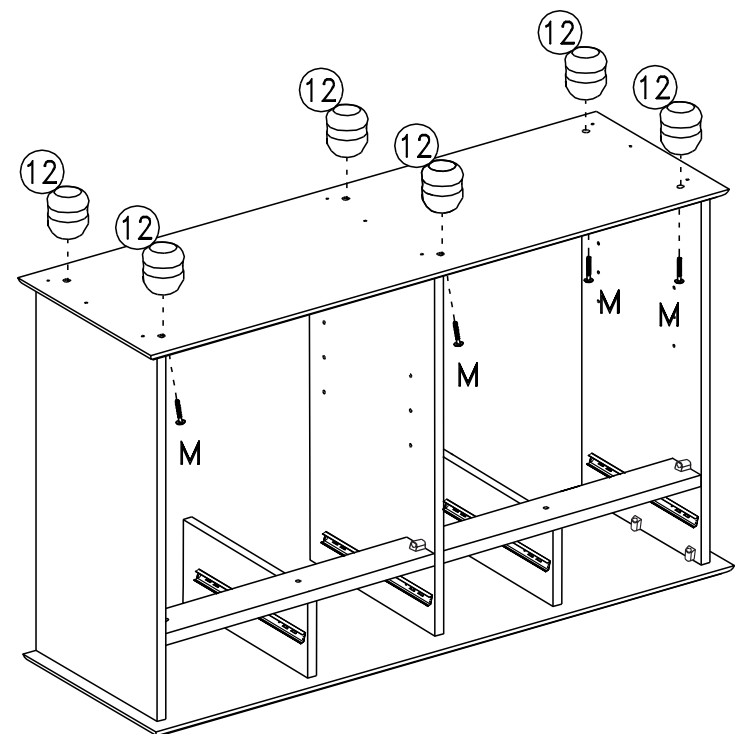


09

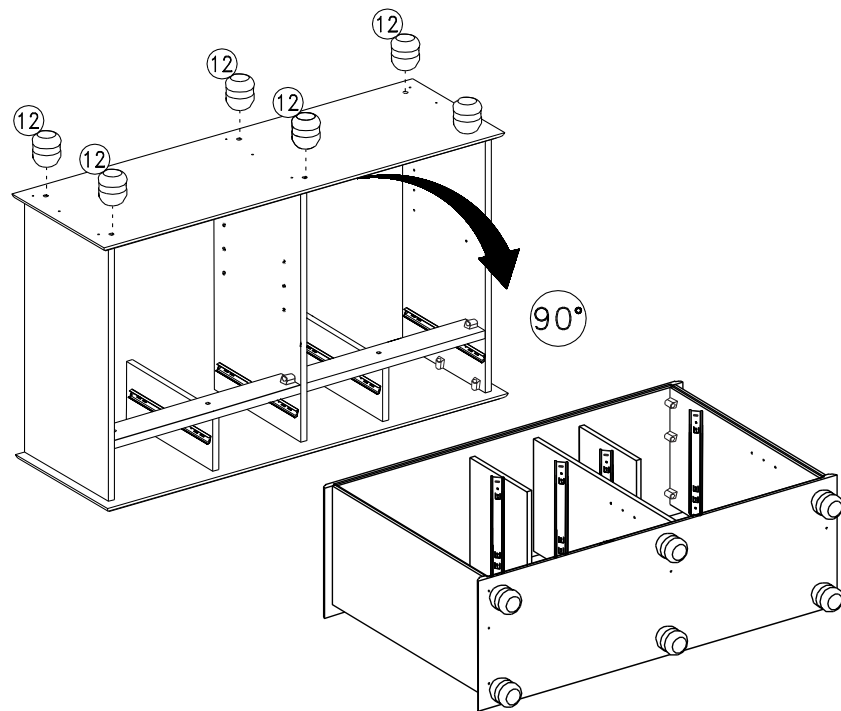


10

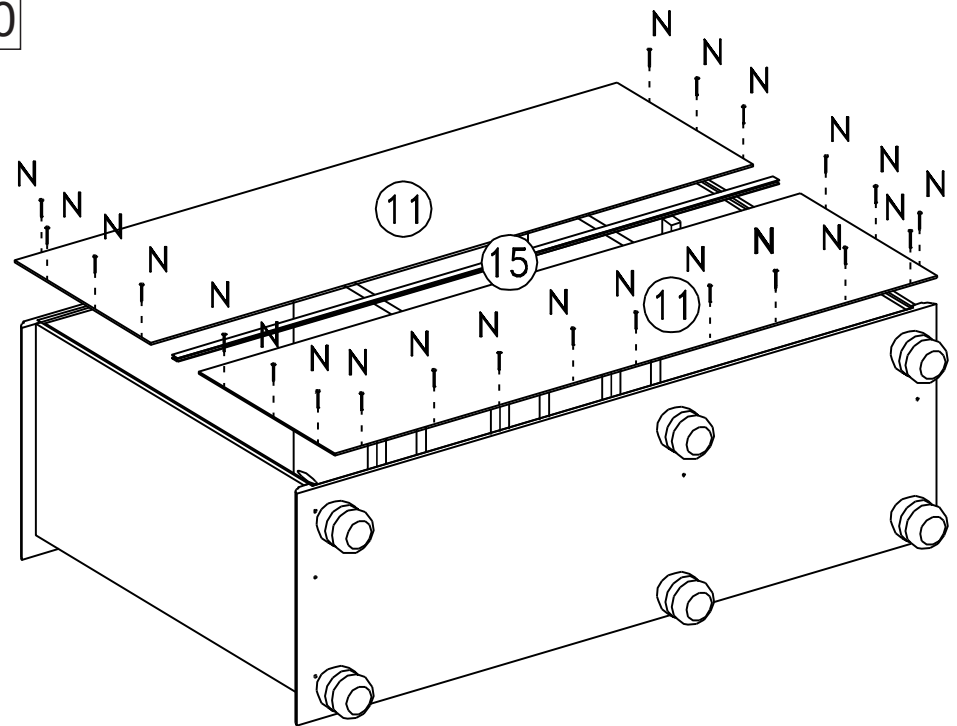


11

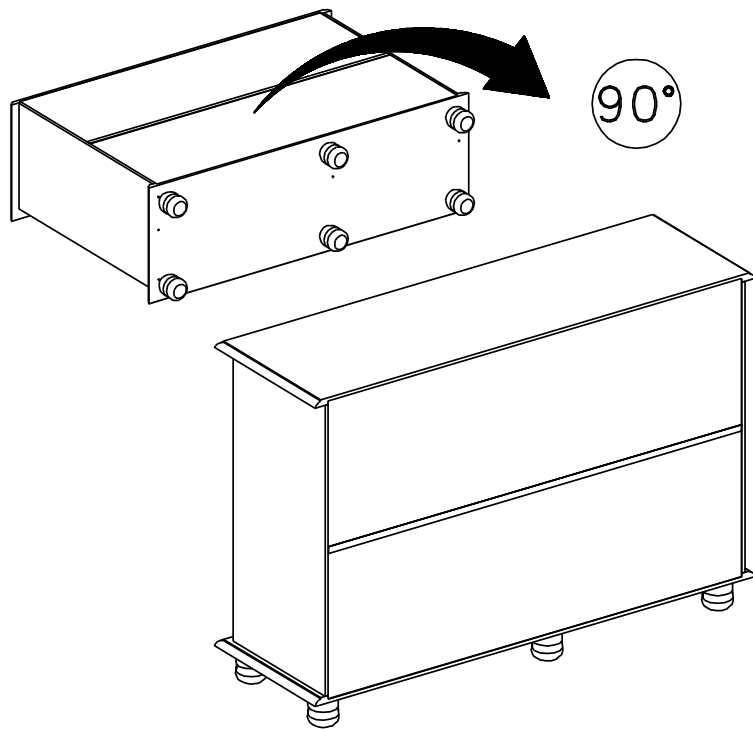


12

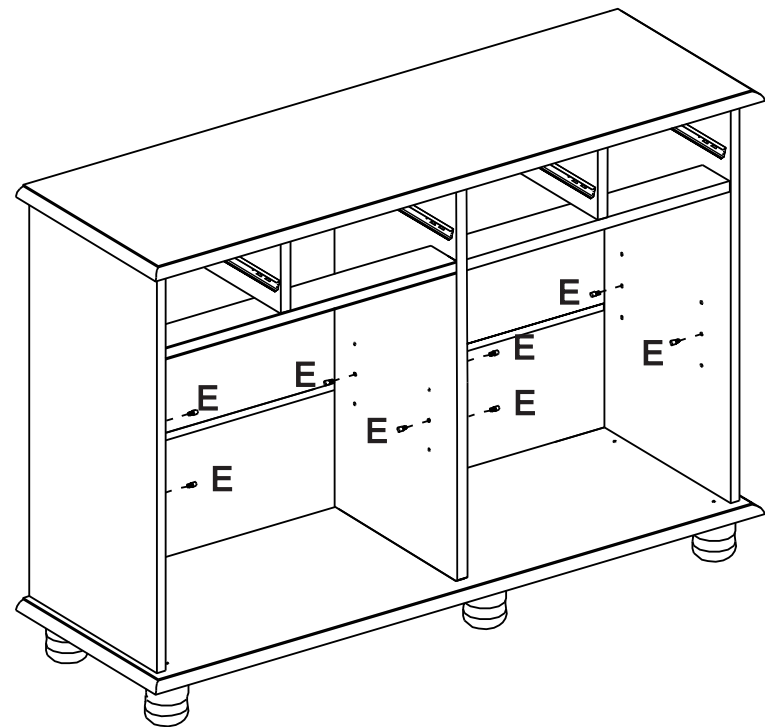



13

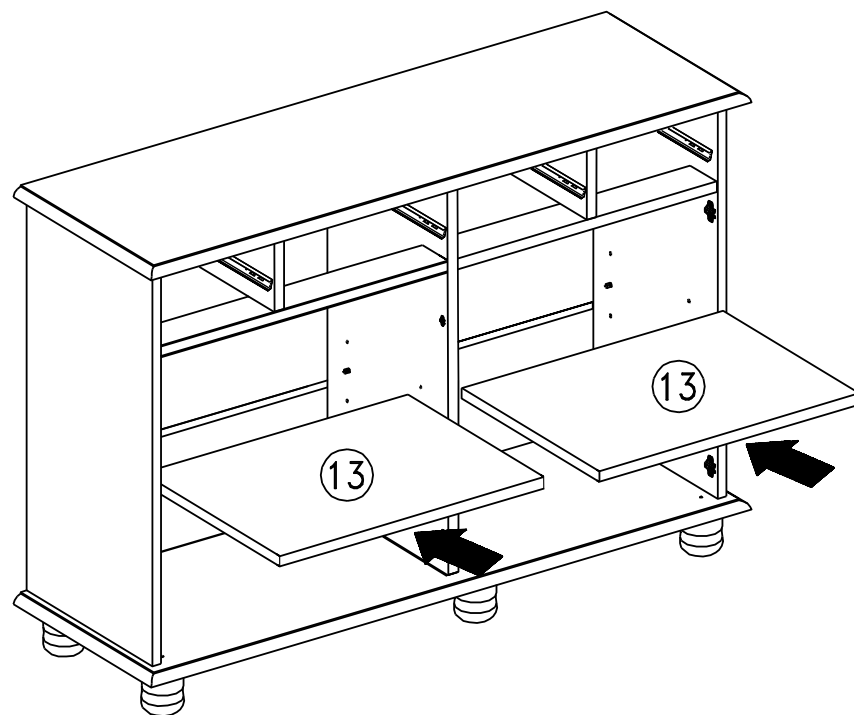


14

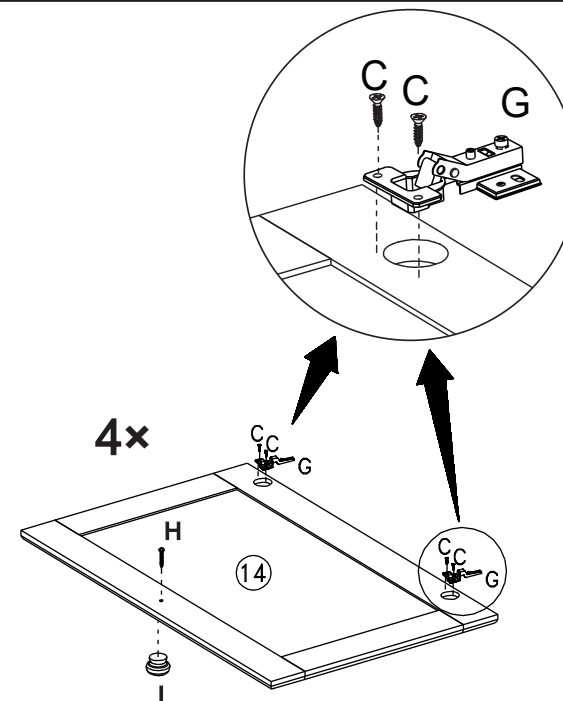



15

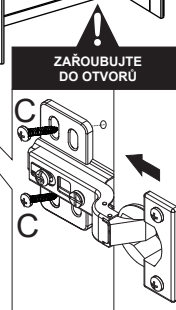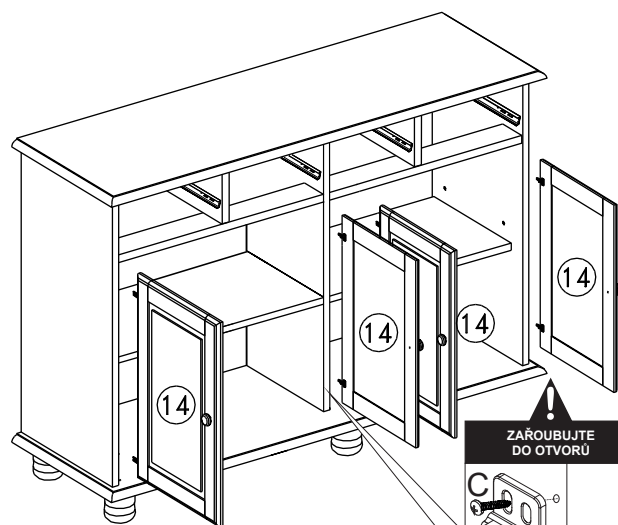

SEŘÍZENÍ DVEŘÍ

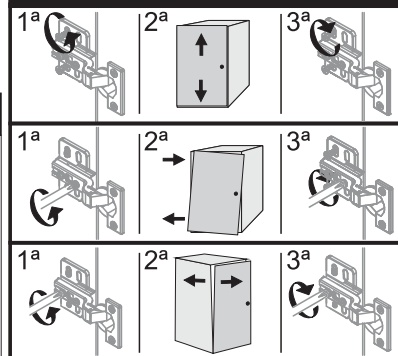


16

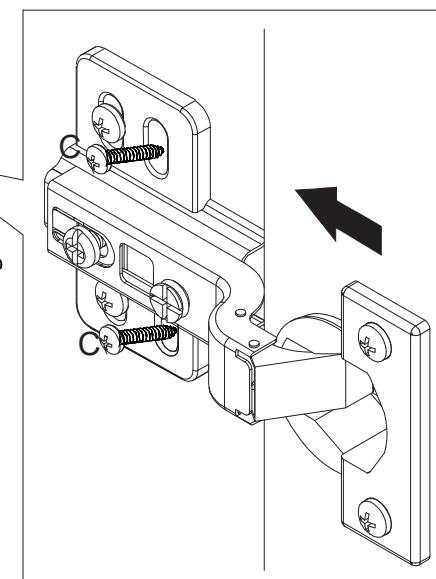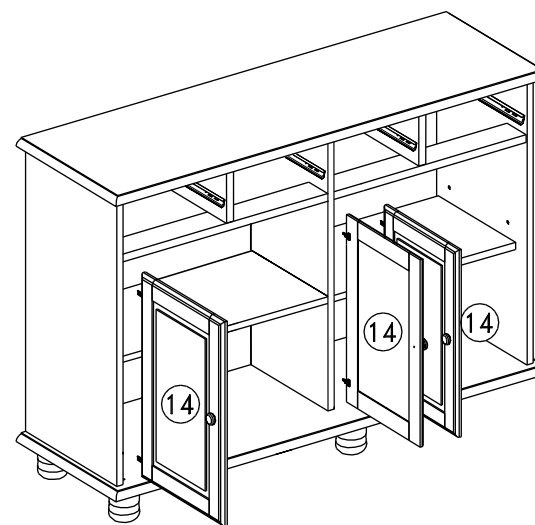


17

4×

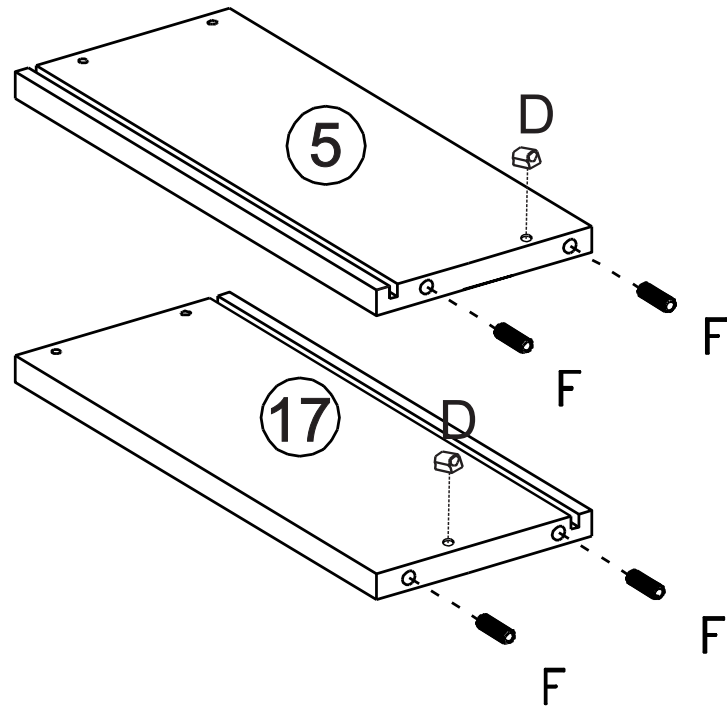


18

4×

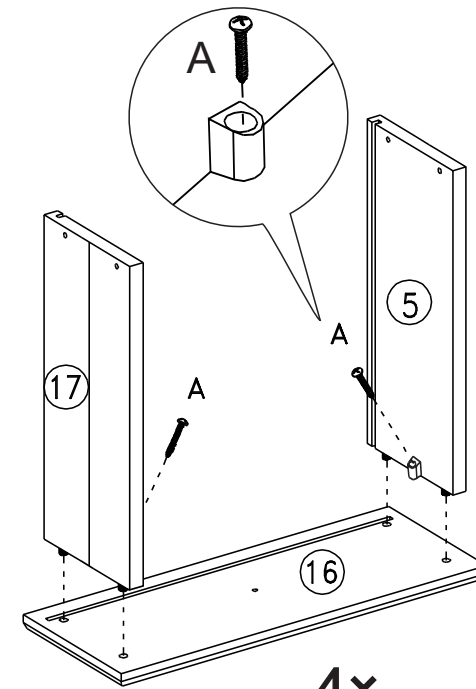


19

4×

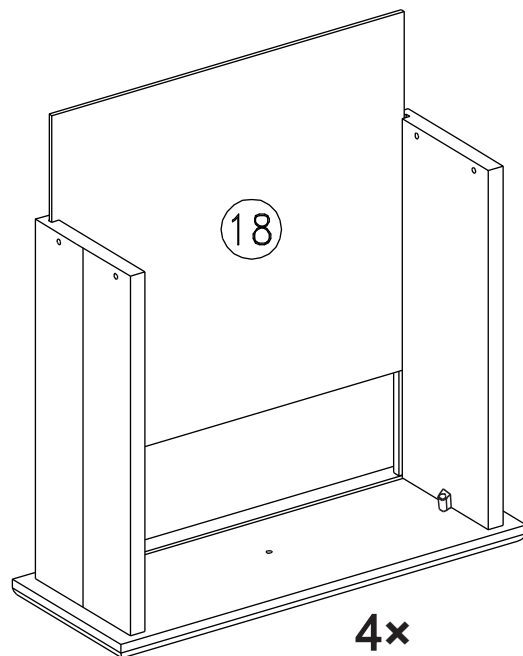


20

4×

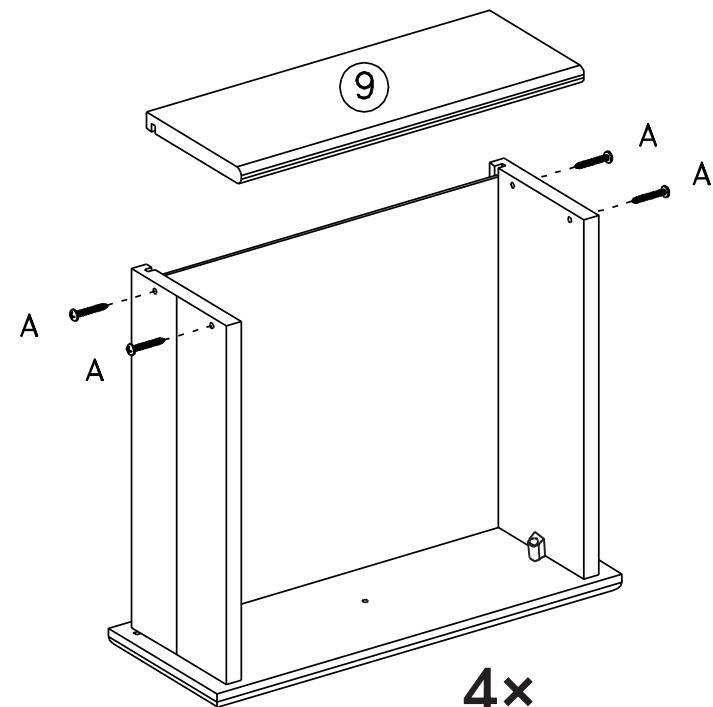

21

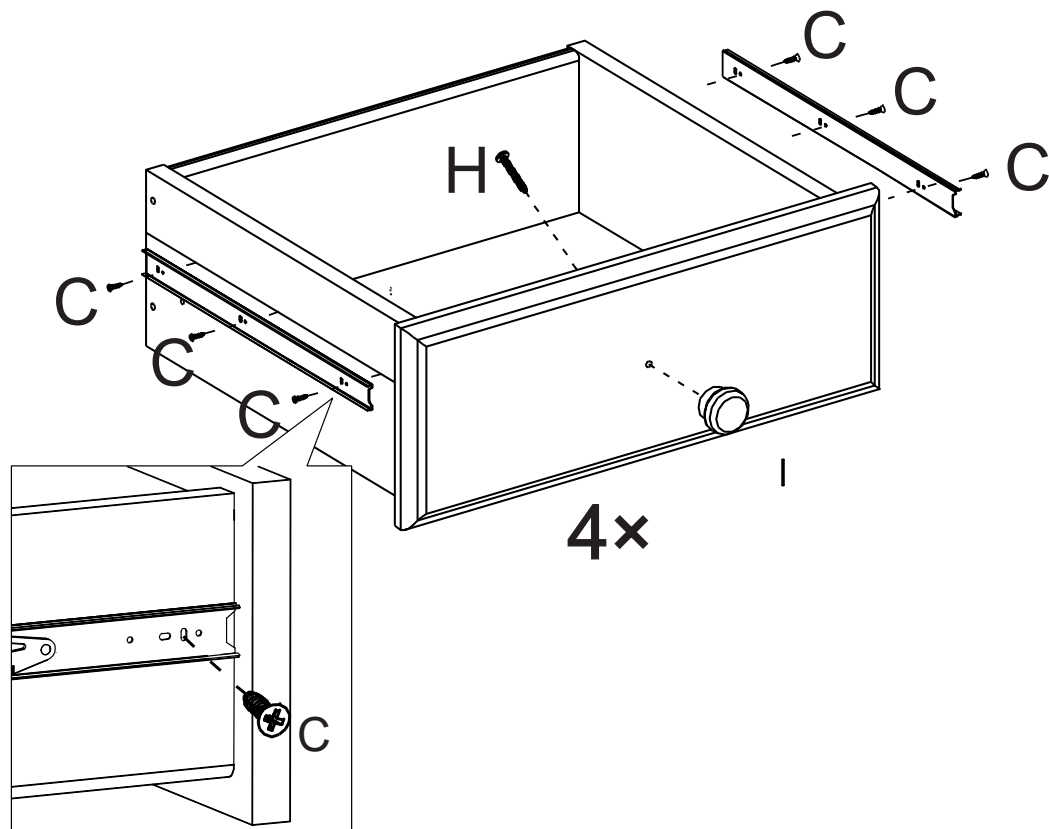

22

