



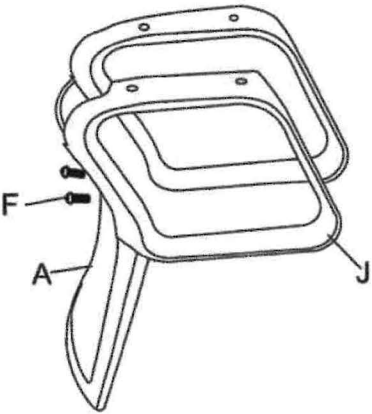


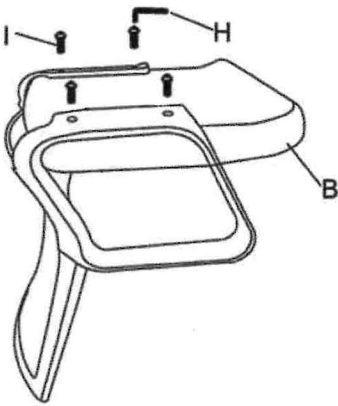

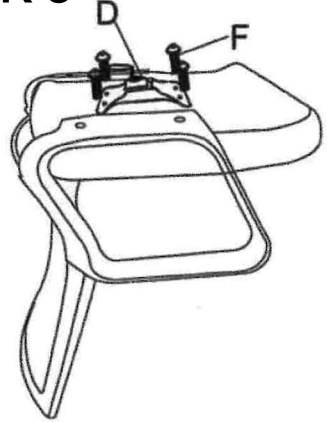





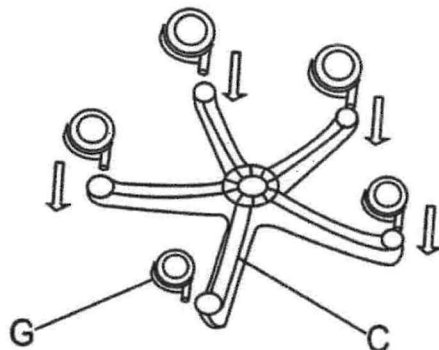

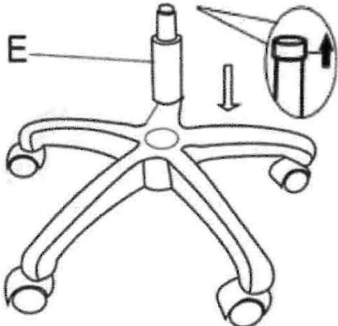

NÁVOD K MONTÁŽI

<p>KROK 1</p> 	<p>KROK 2</p> 	<p>KROK 3</p> 	<p>KROK 4</p> 									
<p>KROK 5</p>  <p>Odstraňte ochranný kryt</p>	<p>KROK 6</p> 											
<p>A</p>  <p>x1</p>	<p>B</p>  <p>x1</p>	<p>C</p>  <p>x1</p>	<p>D</p>  <p>x1</p>	<p>E</p>  <p>x1</p>	<p>F</p>  <p>M6 x 20 x 6</p>	<p>G</p>  <p>x5</p>	<p>H</p>  <p>x1</p>	<p>I</p>  <p>M6 x 30 x 4</p>	<p>J</p>  <p>x2</p>			